


- A. 電源開關掣  
B. 重設鍵  
C. 程序選擇旋鈕  
D. 「您想」程序鍵

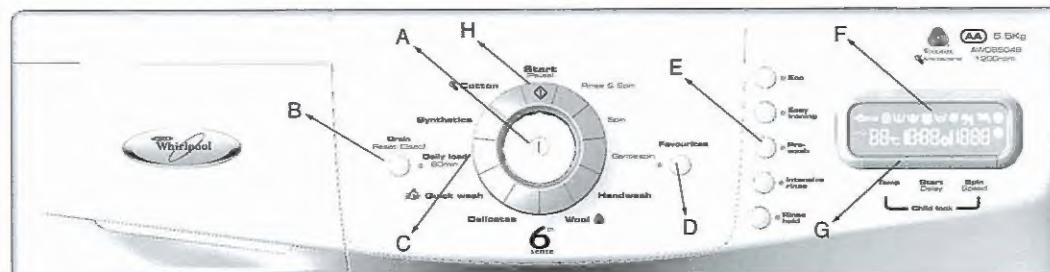

- E. 功能選擇鍵  
F. 液晶顯示屏幕  
G. 溫度、預校開機時間、脫水轉速選擇鍵  
H. 啟動/暫停鍵

洗衣程序	衣服標籤	衣物種類/骯髒程度	最大洗衣量	洗衣劑和柔順劑			「您想」程序	洗衣功能選擇							最高脫水轉速
				預洗	主洗	柔軟洗		預校開機	恆電	預洗	易燙貼	深層過水	延遲過水	脫水轉速選擇	
		洗滌溫度的選擇，請按照衣物標籤上的建議進行	公斤												轉/分鐘
全棉 20℃、30℃、40℃、...、80℃、95℃	 	非常骯髒到中度骯髒的床單、枱布、內衣、毛巾、襯衫等全棉或棉麻衣物。對於非常骯髒的衣物，可選擇「預洗」功能。	5.5	*	是	*	*	*	*	*	*	*	*	*	1200
合成纖維 20℃、30℃、40℃	 	中度骯髒的上衣、襯衫及其它合成纖維衣物（滌綸、聚酯纖維）外衣或棉混紡衣物。	2.0	*	是	*	*	*	*	*	*	*	*	*	1000 <sup>(1)</sup>
60分鐘日日洗 20℃、30℃、40℃、50℃、60℃	 	輕微骯髒、中度骯髒的棉質或合成纖維衣物。	2.5	—	是	*	*	*	—	—	—	*	*	*	1200
30分鐘速洗 20℃、30℃	 	穿了一會兒的外套、棉衣、聚酯纖維、聚酯氨和混紡運動服裝。	2.5	—	是	*	*	*	—	—	—	*	*	*	1200
纖幼 20℃、30℃		窗簾、質料纖幼的裙子、襯衫、外套。	1.5	*	是	*	*	*	—	*	—	—	*	*	1000 <sup>(1)</sup>
羊毛 20℃、30℃、40℃		只能洗滌有羊毛標記，及可機洗的羊毛衣物。如果選擇了「延遲脫水」功能，切勿讓衣物長時間在水中浸泡。	1.0	—	是	*	*	*	—	—	—	—	*	*	1000 <sup>(1)</sup>
手洗 20℃、30℃、40℃		標記為手洗的棉麻、絲綢、人造絲的衣物。如果選擇了「延遲脫水」功能，切勿讓衣物長時間在水中浸泡，程序結束時會進行輕柔脫水操作。	1.0	—	是	*	*	*	—	—	—	—	*	*	400 <sup>(2)</sup>
過水+脫水	—	與「全棉」程序的最後一次過水、脫水過程相同。	5.5	—	—	*	*	*	—	—	—	—	*	*	1200
脫水	—	強力脫水，與「全棉」程序的脫水過程相同。	5.5	—	—	—	*	*	—	—	—	—	—	*	1200
輕柔脫水	—	輕柔脫水，與「羊毛」程序的脫水過程相同。	1.0	—	—	—	*	*	—	—	—	—	—	*	1000 <sup>(1)</sup>

\* 可選 是：必須加入 --: 不可選

(1) 為了呵護衣物，脫水速度限制為1,000轉/分鐘。

(2) 為了呵護衣物，脫水速度限制為400轉/分鐘。

惠而浦 (Whirlpool) 是美國惠而浦公司的註冊商標

基本程序表



## 性能數據

程序	溫度 (°C)	程序持續時間(大約) (小時:分鐘)
全棉※※	70、80、95	2:15
全棉※※※	60	2:10
全棉	20 (冷水)、30、40、50	1:54、1:55、1:59、2:03
合成纖維	20 (冷水)、30、40	1:10、1:11、1:15
60分鐘日日洗	20 (冷水)、30、40、50、60	0:45、0:46、0:50、0:58、1:05
30分鐘速洗	20 (冷水)、30	0:29、0:30
纖幼	20 (冷水)、30	0:39、0:40
羊毛	20 (冷水)、30、40	0:41、0:42、0:46
手洗	20 (冷水)、30、40	0:35、0:36、0:40

性能數據是按照IEC/EN60456, GB/T4288標準, 在正常條件下測試結果, 與用戶使用時的實際耗水、耗電量、水溫、水壓以及洗滌衣物種類有關。

※ 程序實際運行時間, 可能與表中數據不同, 洗衣機能根據洗滌條件自動調節。

※※ 為降低水溫, 防止衣物起皺, 主洗過程結束後、排水前, 洗衣機會自動加入冷水降溫。

※※※ 標準測試洗衣程序。

## 加入洗衣劑, 關好機門, 選擇程序

根據使用手冊中“洗衣劑和柔順劑”一節的說明, 加入洗衣劑後, 關好機門。

1. 按下電源開關後, 周圍的指示燈亮起, 顯示屏幕顯示預設洗衣程序(日常洗)。
2. 如要選擇其他洗衣程序, 請使用程序選擇旋鈕選擇所需洗衣程序。每種洗衣程序均已預設溫度及脫水轉速, 亦可使用溫度、脫水轉速選擇鍵作出調整。
3. 按啟動/暫停鍵1秒以上啟動洗衣機。

## 選擇附加功能

按下希望增加的功能鍵, 對應的指示燈亮起。當選擇的程序和附加功能不配合時, 不能組合的功能將自動取消, 指示燈隨即熄滅。

預洗

- 適用於非常骯髒的衣物(如沙土、灰塵), 程序時間延長15分鐘。

深層過水

- 增加一過水洗程序, 並延長漂洗時間。
- 本功能適合於水質很軟的地區, 或洗滌嬰兒衣物, 或對洗衣劑過敏的人。

恆電洗

- 洗滌時間延長, 洗滌溫度降低, 可達到完美的洗衣效能, 而且大大降低耗電量。

易燙貼

- 可以與全棉、合成纖維程序組合, 令衣物更易燙燙。
- 為減少起皺, 增加用水量, 並進行輕柔脫水。

延遲脫水

- 洗滌衣物將留在最後一次過水中, 洗衣機並不進行脫水。可避免衣物顏色變暗、起皺。

- 建議洗滌纖維、纖柔衣物時, 選擇此功能。

- 如果希望延遲脫水時間, 此功能很有效用。

註: 當洗衣程序的延遲脫水指示燈亮起、啟動/暫停鍵的指示燈閃動時, 運行到延遲脫水時, 洗衣程序便會停止。


如何停止延遲脫水

- 按啟動/暫停鍵, 洗衣機自動運轉至當前選擇程序的脫水過程, 結束程序。

- 如果你不想將衣物進行脫水, 按下重設鍵至少3秒, 便會進行排水程序。

## 顯示屏幕代碼

當洗衣程序操作至一定階段, 顯示屏幕將出現相應的代碼。

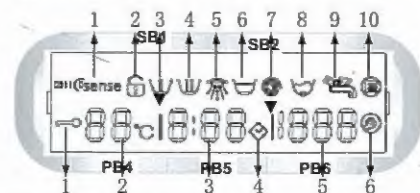

(由左至右, 由上至下)

第一排: (1)第六感洗滌 (2)開門指示燈

(3)預洗指示燈 (4)主洗指示燈 (5)漂洗指示燈 (6)延遲脫水指示燈 (7)脫水指示燈 (8)排水指示燈 (9)水龍頭關閉指示燈 (10)清理過濾器指示燈

第二排: (1)兒童安全鎖指示燈 (2)溫度指示燈 (3)時間指示燈 (4)預校時間指示燈 (5)脫水轉速指示燈 (6)維修指示燈

## 溫度、預校開機時間、脫水轉速

溫度選擇及脫水轉速

當選擇某種洗衣程序時, 顯示屏顯示預設的洗滌溫度及脫水轉速。有需要時, 可按下溫度選擇或脫水轉速選擇鍵進行調整。

預校開機時間

時間功能讓您在方便的時候洗滌衣物, 如在電費較便宜的晚間時份使用。

- 選擇程序、溫度、附加功能。

- 按預校開機時間功能鍵, 選擇由10分鐘至最高23小時的預校時間開機時間。

- 當程序開始後, 數碼視窗顯示剩餘時間。

- 當按下啟動/暫停鍵, 以及再次按下預校開機時間掣, 便可更改設定的預校開機時間。

取消預校開機時間開機功能

- 在按啟動/暫停鍵之前

選擇其他程序選擇鍵, 或按重設鍵。

- 在按啟動/暫停鍵後

按啟動/暫停鍵, 預校開機時間從顯示窗消失。

## 啟動程序

開啟水龍頭, 按啟動/暫停鍵, 開始洗衣程序, 啟動/暫停鍵旁的指示燈亮起, 程序過程指示燈顯示洗衣程序的進度。由於衣物、進水溫度的變化, 控制器在某個程序階段會重新計算剩餘時間。此時顯示窗將顯示動畫圖案。如在程序進行時需要轉換其他程序, 請先按啟動/暫停鍵暫停程序, 然後選擇其他程序。

## 開門指示燈

啟動程序前和程序結束後, 指示燈亮起, 表示可打開機門, 只要程序正在運行, 機門保持鎖定, 便不能用力打開機門以免損壞機器。如果急需在程序運行過程中打開機門, 請參考程序結束前“重設”一節。

## 水龍頭關閉、清理過濾器指示燈

入水喉關閉

當水龍頭沒有供水或供水不足, 顯示屏幕的水龍頭關閉指示燈發亮。請開啟水龍頭, 然後按下啟動/暫停鍵暫停程序。

如果指示燈仍然亮起, 請參考使用手冊的“故障排除”一節。

當洗滌用水沒有排出, 清理過濾器指示燈亮起。請檢查排水管是否打結、堵塞, 或排水泵過濾器是否需要清潔。

清理排水泵過濾器, 如屬後者, 請參考使用手冊“拆除過濾器”一節。

## 兒童安全鎖指示燈

除了使用說明書提到的機械兒童安全鎖外, 本型號還為程序設置兒童安全鎖設定。同時按下溫度、脫水轉速鍵3秒以下, 兒童安全鎖功能啟動。兒童安全鎖指示燈亮起。如要取消此功能, 請持續按下溫度及脫水轉速鍵3秒以上便可。

## 「您想」程序

當已選擇洗滌程序但仍未按下啟動/暫停鍵時, 持續按下「您想」程序鍵3秒以上, 便可為該程序進行程序編輯。每個洗滌程序可儲存一個編輯程序, 如要設定一個新的編輯程序, 原先已設定的編輯程序將被取代。

使用程序編輯時, 先按下程序編輯選擇鍵選擇相應的主程序, 然後長按「您想」程序鍵3秒以上, 再按啟動/暫停鍵啟動「您想」程序。

## 程序結束

所有程序過程指示燈熄滅。“開門”指示燈亮起。

1. 按下電源開關。關閉水龍頭。
2. 打開機門, 取出衣物。
3. 機門微開, 讓洗衣桶吹乾。

## 程序開始後更改程序、附加功能

1. 按啟動/暫停鍵中止程序, 指示燈閃動。
2. 選擇新程序、附加功能。如需要可選擇脫水轉速。
3. 再次按啟動/暫停鍵開始新程序。

新洗衣程序將在上一個程序中中止的位置繼續運行, 因此不要添加洗衣劑。

## 重設鍵


- 在選擇程序模式時按重設鍵, 選擇排水模式。如需啟動排水模式, 按下啟動/暫停鍵。
- 在程序執行模式下按重設鍵至少3秒, 重新進行所有設定並排水, 顯示屏幕出現[—rES]。此時您可按下啟動/暫停鍵, 然後選擇其他程序。




 






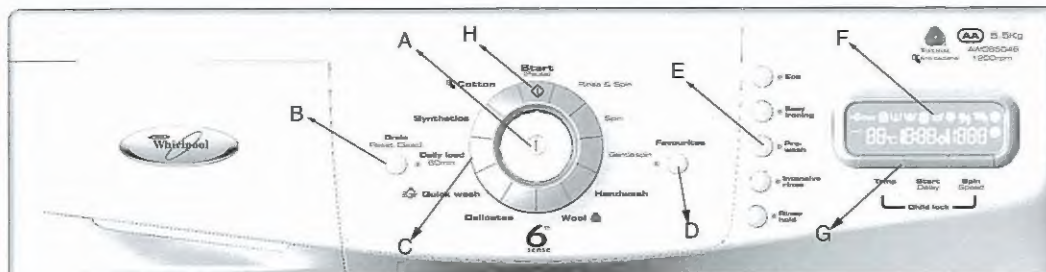




# AWO85048

- A. "On/Off" Button
- B. "Drain/Reset" Button
- C. Program Selector Knob
- D. "Favourites" Button

## Program Chart



- E. "Function" Button
- F. LCD Display
- G. "Temperature, Start Delay & Spin Speed" Button
- H. "Start/Pause" Button

Washing Program	Care Labels	Type of wash/ Degree of dirtiness <small>For temperature selection, please follow the recommendations on the care label.</small>	Max Load Kg	Detergents and Softener			Favourites	Wash Function Selection							Max Spin Speed rpm
				Pre-wash	Main Wash	Softener		Start Delay	Eco	Prewash	Easy ironing	Intensive Rinse	Rinse hold	Spin Speed	
Cotton 20°C ; 30°C ; 40°C ... 80°C ; 95°C°	   	For heavily soiled to normally soiled bed sheet, table cloth, underwear, towels, shirts, made of cotton or linen. Please select an additional "Pre-wash" function for heavily soiled clothes.	5.5	*	Yes	*	*	*	*	*	*	*	*	*	1200
Synthetics 20°C ; 30°C ; 40°C	 	Normally soiled jackets, blouses, clothes and coats made of synthetics fibres (polyester fiber, trevira) or blends with cotton.	2.0	*	Yes	*	*	*	*	*	*	*	*	*	1000 (1)
Daily load 60 min 20°C ; 30°C ; 40°C 50°C, 60°C	 	Slightly or normally soiled clothes made of cotton or synthetic.	2.5	—	Yes	*	*	*	—	—	—	*	*	*	1200
Quick wash 30 min 20°C ; 30°C	 	Shortly worn outer clothing made of cotton, polyester fibre, polyesteramine and blend with fabric.	2.5	—	Yes	*	*	*	—	—	—	*	*	*	1200
Delicate 20°C ; 30°C		Curtain and skirts, blouses, coats made of delicate materials.	1.5	*	Yes	*	*	*	—	*	—	—	*	*	1000 (1)
Wool 20°C ; 30°C ; 40°C		Only woolens labeled with the woolmark and identified as machine washable. If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	1000 (1)
Handwash 20°C ; 30°C ; 40°C		Clothes made of linen, silk, viscose and labeled as handwashable. If the "Rinse hold" function is chosen, do not leave the clothes to soak for too long. The Gentle Spin function will operate when the program ends.	1.0	—	Yes	*	*	*	—	—	—	—	*	*	400 (2)
Rinse + Spin	—	Same as the last rinse and spin in the "Cotton" programme.	5.5	—	—	*	*	*	—	—	—	—	*	*	1200
Spin	—	Intensive Spinning, same as the spin cycle in the "Cotton" programme.	5.5	—	—	—	*	*	—	—	—	—	—	*	1200
Gentle spin	—	Gentle spinning, same as the spin cycle in the "Wool" programme.	1.0	—	—	—	*	*	—	—	—	—	—	*	1000 (1)

\* Optional/Yes: dosing required - Not suitable

(1) For caring garment quality, spin speed is restricted to 1000rpm in this programme.

(2) For caring garment quality, spin speed is restricted to 400rpm in this programme.

Whirlpool is a registered trademark of Whirlpool USA

## Basic Programme Chart

## Performance Data

Programme	Temperature (°C)	Programme Duration (approximately) (hour:minute)
Cotton ※ ※	70, 80, 95	2:15
Cotton ※ ※ ※	60	2:10
Cotton	20 (Cold water), 30, 40, 50	1:54, 1:55, 1:59, 2:03
Synthetics	20 (Cold water), 30, 40	1:10, 1:11, 1:15
Daily Load 60 min	20 (Cold water), 30, 40, 50, 60	0:45, 0:46, 0:50, 0:58, 1:05
Quick Wash 30 min	20 (Cold water), 30	0:29, 0:30
Delicate	20 (Cold water), 30	0:39, 0:40
Wool	20 (Cold water), 30, 40	0:41, 0:42, 0:46
Handwash	20 (Cold water), 30, 40	0:35, 0:36, 0:40

Performance data is measured in normal condition in compliance with IEC/EN60456 GB/T4288 standard. Energy and water consumption of domestic use is subject to water pressure, temperature and the type of wash.

※ The actual programme time may deviate from the values in the table. The washing programme will be adjusted automatically according to the washing condition.

※ ※ To reduce the water temperature for preventing of wrinkles, cold water is added automatically after the main wash cycle and before draining process.

### ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

1. Press **"Power"** button while the indicator is lit up. The screen indicates and accepts the program (Daily wash).
2. Press **Program Selector Knob** when choosing other programmes. All programmes have their own predefined setting of temperature and spinning speed. Press **"Temperature, Spinning Speed"** button to set the temperature and spinning speed.
3. Press **"Start/Pause"** button for 1 sec to start the washing machine

### SELECT DESIRED FUNCTION

Press the desired option button and the corresponding indicator lights up. When the combination of selected programme and the desired additional option is not practicable, the option will be cancelled and the indicator switches off immediately.

#### Prewash

- Suitable for heavily soiled loads (for example with sand and dust) and the programme duration is prolonged for 15 minutes.

#### Intensive Rinse

- Adding one more rinsing programme and extend its rinsing duration.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

#### Eco

- With a prolonged washing duration and lower washing temperature, a desirable washing performance can be obtained and reduces energy consumption.

#### Easy Ironing

- Can be used together with "Cotton", "Synthetics" programmes to make ironing easier.
- To avoid creasing, water level is increased and gentle spin programme is applied.

#### Rinse Hold


- The laundry remains in the last rinse water without proceeding to the spin cycle to avoid creasing and fading
  - This function is recommended for washing synthetic and delicate clothes.
  - This function is very effective to delay the spinning time.
- Note: When the "rinse-hold" light in the programme sequence is on and the indicator next to **"Start/Pause"** button flashes, the programme switches to rinse hold sequence and the programme stops.

#### How to stop the "Rinse Hold" Programme

- Press the **"Start/Pause"** button, the washing machine automatically switches to the spinning process of the selected programme option, and the programme ends.
- If you do not want to spin the clothes, press **"Reset"** button for at least 3 seconds and turn programme selector knob to "Drain".

### Screen Codes

Screen will show the relative codes of the desired or predefined program.

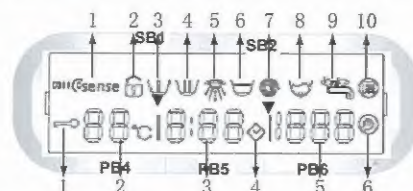

(from left to right, top to bottom)

First row: (1) 6th Sense washing, (2) "Door Open" Indicator (3) Pre-wash Indicator (4) Main Wash Indicator (5) Rinse Indicator (6) Rinse Hold Indicator (7) Spin Indicator (8) Drain Indicator (9) Water Tap Closed Indicator (10) Clean Pump Indicator

Second row: (1) Child Lock Indicator (2) Temperature Indicator (3) Time Indicator (4) Start Delay Indicator (5) Spin Indicator (6) Service Indicator

### Temperature Selection and Spin Speed

#### Temperature and spin speed

When a process is chosen, the predefined temperature and spinning speed will appear on the screen. Press **"Temperature"** or **"Spin Speed"** button to set the temperature and spinning speed.

#### Start Delay Function

Start Delay Function allows running the machine at your convenience, for example during night time when electricity is cheaper.

- Select programme, temperature and additional function
- Press the Start Delay button to select the delay time from 10 minutes up to maximum 23 hours.

When the programme starts, the remaining time is shown on the LCD display

- By pressing the **"Start/Pause"** button, and pressing the Start Delay button again, the preset hours of the Start Delay can be adjusted.

Cancel the Start Delay function

- Before pressing the **"Start/Pause"** button, turn the programme selector knob to another programme position, or press the Reset button

- After pressing the **"Start/Pause"** button, press and hold the Reset button for 3 seconds, the Start Delay time will disappear from the display.

### Programme Start

Open the tap and press the **"Start/Pause"** button to start the wash programme. The indicator next to the **"Start/Pause"** button lights up. The programme sequence indicator will show the progress of the current programme. With the variations in the type of clothes and temperature of the inlet water, the control will recount the remaining time at a certain stage when the programme is running. At the same time, the display will show the corresponding icons. If you want to switch from one programme to another programme, please press **"Start/Pause"** button first before you choose other programmes.

### "Door Open" Indicator

Before the programme starts and after it ends, the indicator will light up and the door of the machine can be opened. When the Programme is running, the door will remain locked and cannot be forced open or the machine will be damaged. If you need to open the door urgently during the programme is running, please refer to the Chapter of "Reset. A Running Programme Before It Ends".

### Water tap closed & Clean pump indicator

When the appliance has no or insufficient water supply, water tap indicator will appear on the screen. Open the water tap and then press **"Start/Pause"** button. If the indicator still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

When waste water is not pumped out, clean pump indicator will light up. Check whether the drain hose is kinked or clogged or whether the filter of draining pump has to be cleaned. If it is the latter case, clean the drain pump filter. Please refer to the chapter of "Removing the Filter" in the Instructions for Use.

### Child lock indicator

This washing machine has set a child lock in the process besides the mechanical child lock mentioned in the manual.

Press **"Temperature"** and **"Spin Speed"** simultaneously for 3 sec or more, child lock will be taken into effect and its indicator will light up. Afterwards, press **"Temperature"** and **"Spin Speed"** simultaneously for 3 sec or above and the function of child lock will be cancelled.

### Favourites Programme

When you have chosen the desired washing process but not yet press the **"Start/Pause"** button, you can press **"Favourites"** button for at least 3 seconds. Each washing process has its predefined process. When you want to reset a new process for each washing program, the original one will be overwritten by then.

Press Program Selector Knob when you want to have Favourites function. Choose the relative process. Hold **"Favourites"** button for 3 seconds or more and press **"Start/Pause"** button to initiate the Favourites process.

### Programme Ends

- All of the lights of the programme sequence are off. "Door Open" indicator lights up.

1. Press **"On/Off"** button to switch off the machine and close the water tap.
2. Open the door and unload the machine.
3. Leave the door ajar to allow the drum to dry out.

### Change Programme and Options after the Programme Starts

- 1 Press the **"Start/Pause"** button to pause the Programme. The indicator flashes.
2. Select the new programme and any additional function. Select the spin speed if necessary.
3. Press the **"Start/Pause"** button again to start a new programme. The new programme continues at the same position where the previous programme was interrupted, so no additional detergent is needed.

### Reset button

Press the **"Reset"** button and choose draining mode. Press **"Start/Pause"** button to initiate draining.

Press the **"Reset"** button for at least 3 seconds. Reset and start draining, [~R~] will be indicated on the screen. Then you can choose **"Start/Pause"** button before choosing other programme.